
ALTA™

ACOUSTIC CEILING PANELS

5/8" Z-CLIP DIRECT MOUNT


INSTALLATION INSTRUCTIONS

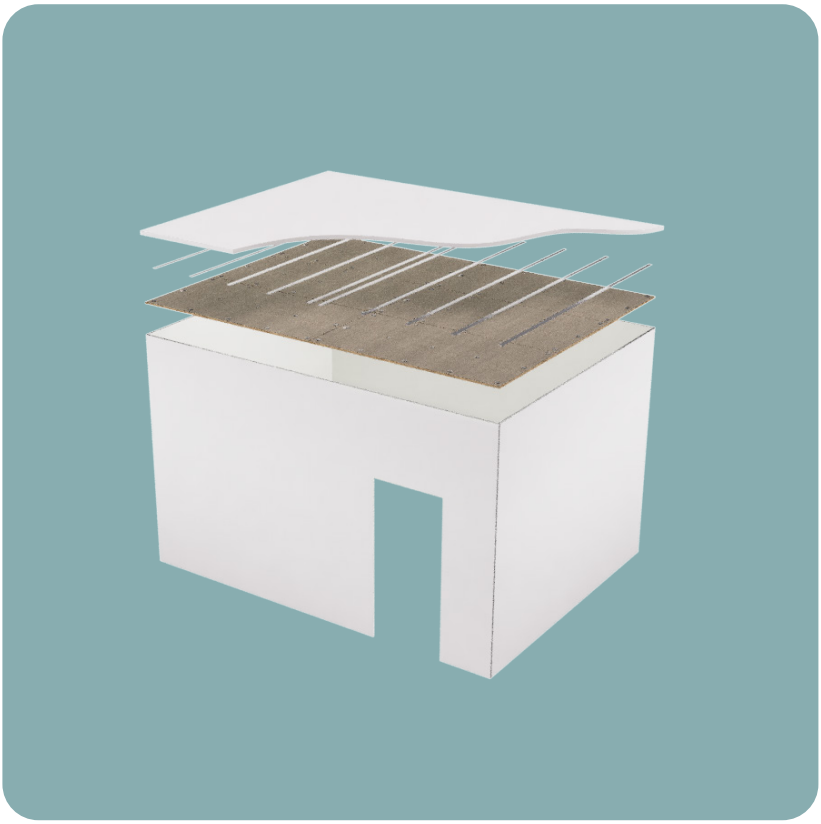


featuring
SOUNDPLY®
ACOUSTIC PRODUCTS
developed and manufactured by
NAVY ISLAND

www.soundply.com • sales@navyisland.com
275 Marie Ave. E, St.Paul, MN 55118 • (651) 451-4454

SUPPLIED HARDWARE

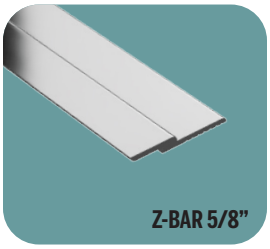

Z-BAR 5/8”



CUSTOM Z-CLIP 5/8”



HELIX SCREW

REQUIRED TOOLS & HARDWARE



TAPE MEASURE



MARKER



SCREW GUN


BEFORE BEGINNING INSTALLATION, **OPEN AND INSPECT ALL PACKAGES** TO ENSURE ALL PARTS LISTED ON THE PACKING LIST ARE INCLUDED AND UNDAMAGED.

IF ANY ITEMS ARE MISSING OR DAMAGED, CONTACT NAVY ISLAND AT (651) 451-4454.

Alta-C-DCM-0126E1
© 2026 Navy Island, Inc. Printed in U.S.A.

Panel Preparation

If panels are sequence matched, location label can be found on the back of the panel. Sequenced panels must be installed according to the shop drawings. If at any point the shop drawings differ from these instructions, follow the shop drawings. If you cannot locate them, contact Navy Island for a copy before attempting to install.

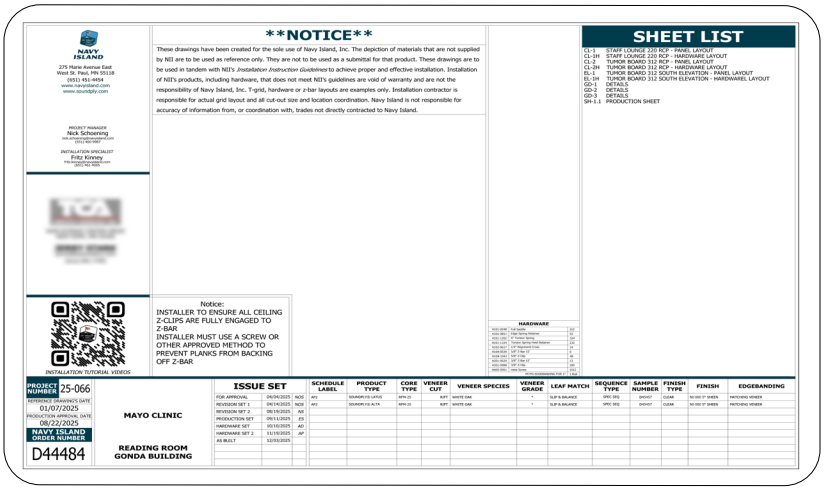


Before starting installation, ensure all wet work such as taping, painting, etc. is complete.

Lay the panel face down on a soft surface and find the panel label. Orient the panel per the shop drawings to ensure correct grain direction when installed.



For edgebanding and field modifications, please see install instructions: "SoundPly Cutting & Edgebanding Instructions".

On panels larger than 16" wide, place Z-Clips 3" OC from each edge of the panel, a max of 24" between vertical clips and a max of 24" between horizontal clips.

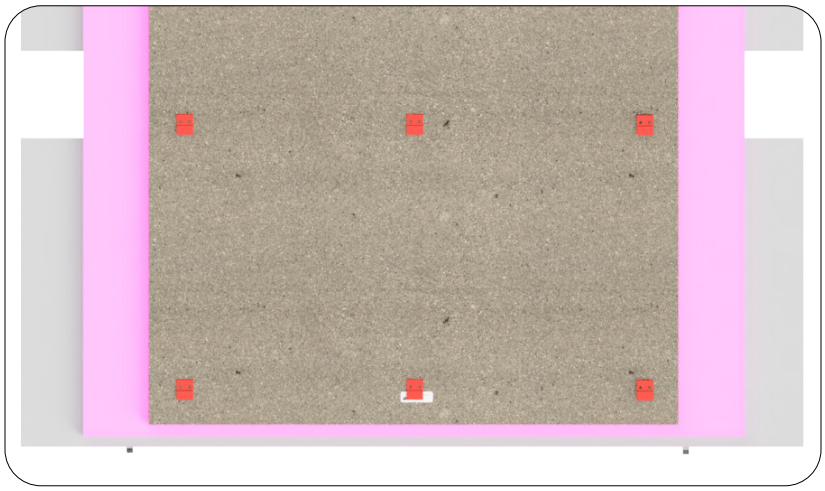


On panels less than 16" wide Z-Clips must be 3" OC from each edge of the panel, or if using Z-Bar cut each Z-Bar 2" shorter than panel width.

© 2026 Navy Island, Inc. Printed in U.S.A.

3

Using a low speed and the low torque setting, screw in each Z-Clip using supplied anchor screws.

Ensure that the screws are not over tightened, if so simply realign Z-Clip to a new spot.

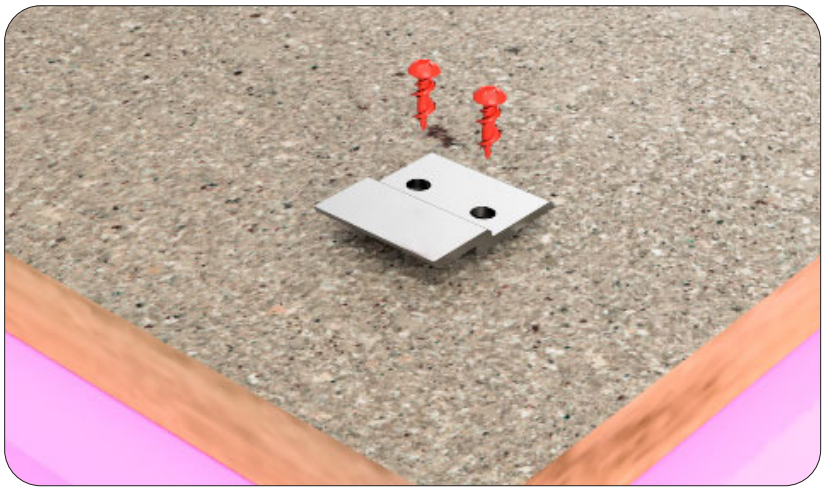


Ceiling Preparation

4

When hanging Z-Bars, the Z-Bar should correspond with the spacing of the Z-Clips.

Anchor points on a single Z-Bar should be no more than 16" apart.

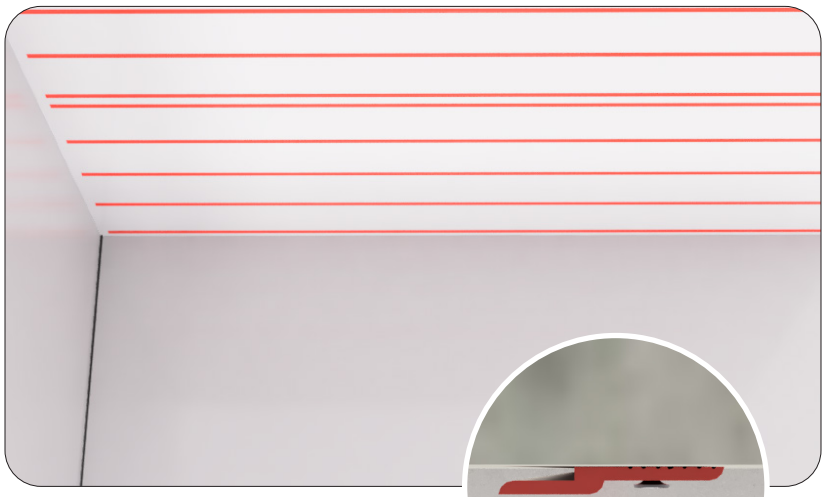

The head of the screw fastening the Z-Bar to the ceiling must be flush or below the surface of the Z-Bar; otherwise the panel will not sit flush.

Panel Installation

5

Once the Z-Bar and Z-Clips are installed, lift panels so that the Z-Clips clear their corresponding Z-Bar. Gently press the panel into the ceiling and slide until Z-Clips are resting in Z-Bars making sure all Z-Clips are engaged.

Every panel must have a stop screw or mechanical fastener to prevent panel from sliding off the Z-Bar.



© 2026 Navy Island, Inc. Printed in U.S.A.