LATUS™

ACOUSTIC WALL PANELS

3/8 Z-CLIP DIRECT MOUNT

INSTALLATION INSTRUCTIONS

featuring
SOUNDPLY®
ACOUSTIC PRODUCTS
developed and manufactured by
NAVY ISLAND

www.soundply.com • sales@navyisland.com
275 Marie Ave. E, St.Paul, MN 55118 • (651) 451-4454

SUPPLIED HARDWARE

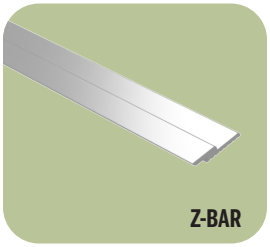

Z-BAR



Z-CLIP

HELIX SCREW

REQUIRED TOOLS & HARDWARE

TAPE MEASURE

MARKER

SCREW GUN

BEFORE BEGINNING INSTALLATION, **OPEN AND INSPECT ALL PACKAGES** TO ENSURE ALL PARTS LISTED ON THE PACKING LIST ARE INCLUDED AND UNDAMAGED.

IF ANY ITEMS ARE MISSING OR DAMAGED, CONTACT NAVY ISLAND AT (651) 451-4454.

Alta-I-BTS-2601E1
© 2026 Navy Island, Inc. Printed in U.S.A.

Panel Preparation

If panels are sequence matched, location label can be found on the back of the panel. Sequenced panels must be installed according to the shop drawings. If at any point the shop drawings differ from these instructions, follow the shop drawings. If you cannot locate them, contact Navy Island for a copy before attempting to install.

Before starting installation, ensure all wet work such as taping, painting, etc. is complete.

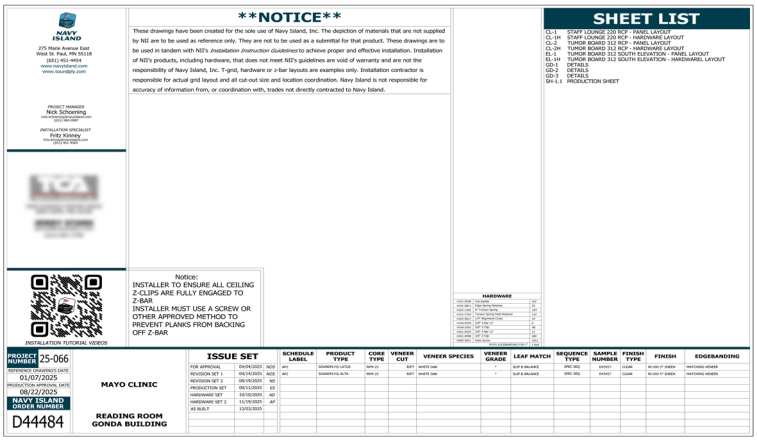

Lay the panel face down on a soft clean surface and find the panel label. Orient the panel per the shop drawings to ensure correct grain direction when installed.

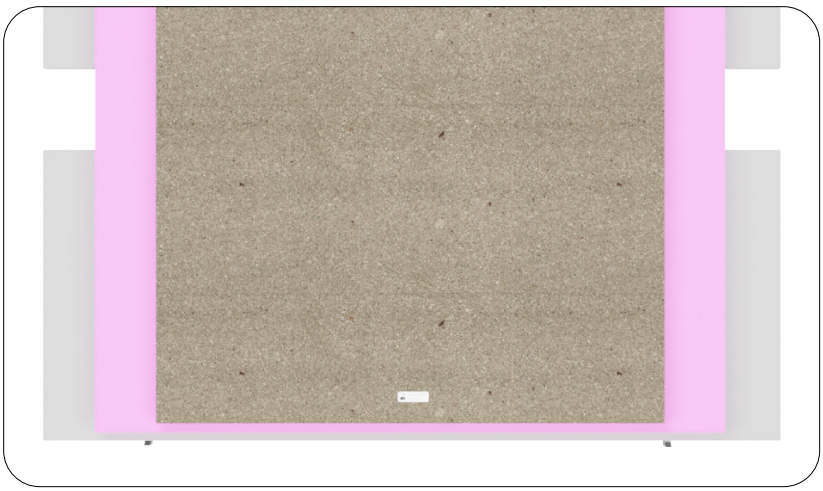

For edgebanding and any field modifications, see "SoundPly Cutting & Edgebanding Instructions."

On panels larger then 16" wide place Z-clips 3" OC from each edge of the panel, a max of 36" between vertical clips and a max of 24" between horizontal clips.

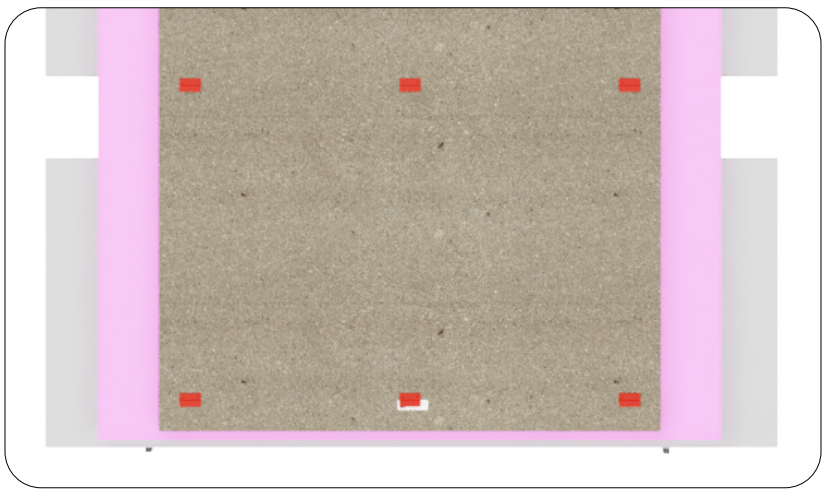

On panels less than 16" wide Z-Clips must be 3" OC from each edge of the panel, or if using Z-Bar cut each Z-Bar 2" shorter than panel width.

© 2026 Navy Island, Inc. Printed in U.S.A.

3

Attach each Z-clip with supplied helix screws.

To ensure that the screws are not over tightened, use a low speed low torque setting on screw gun.

Wall Preparation

4

When hanging Z-Bars, the Z-Bar should correspond with the spacing of the Z-Clips.

All anchor points for each individual Z-bar must be mechanically fastened to the substrate.

The head of the screw fastening the Z-Bar to the wall must be flush or below the surface of the Z-bar; otherwise the panel will not sit flush.

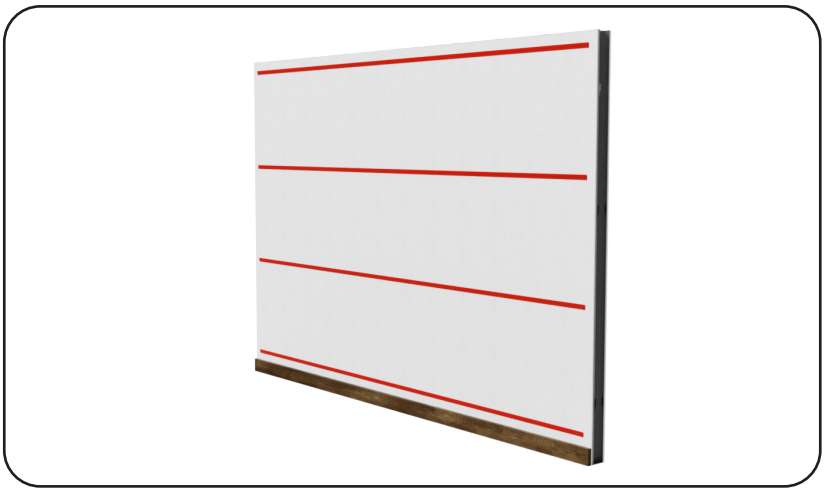

Panel Installation

5

Once the Z-bar and Z-clips are installed, lift panels so that the Z-Clips clear their corresponding Z-Bar. Gently press the panel into the wall and lower until Z-Clips are resting in Z-Bars.

Silicone may be applied to the Z-clips to prevent lateral panel movement.

© 2026 Navy Island, Inc. Printed in U.S.A.